


# HOW TO INSTALL THIS TUBULAR LEVERSET

● Fit Doors 1-3/8" to 2" Thick

● Backset 2-3/8" or 2-3/4"

## New Door Preparation

- A:** Fold template on edge of door marking 2-3/8" or 2-3/4" of holes.  
**B:** Drill a 2-1/8" hole through door (from both sides to avoid damaging door).  
**C:** Drill a 1" hole in door edge.  
**D:** Cut out a 2-1/4"x1"x1/8" base.

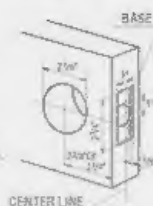

## Latch Preparation




### If Needed, Change Latch Faceplate

- A:** Separate faceplate from backplate as shown.  
**B: FOR DRIVE-IN LATCH:** Rotate backplate and slide off latch.  
**C:** Snap on drive-in faceplate and secure with collar.

### Instruction For Adjustable Latch

The cam is pushed fully to the right for 2-3/4" backset.  
(During the adjustment, keeping two teeth of the cam forward always.)


## Install Latch

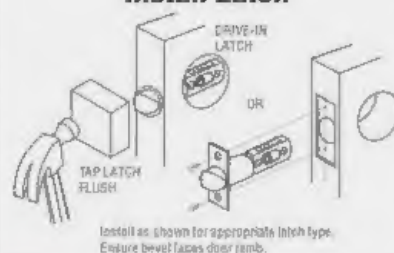


## 1 DISASSEMBLE INSIDE LEVER AND INSIDE ROSE




## 2 INSTALL OUTSIDE LEVER

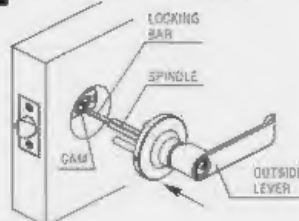


## 3 INSTALL INSIDE PLATE ASSEMBLY

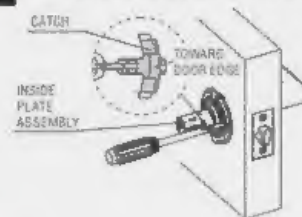

## 4 INSTALL INSIDE ROSE

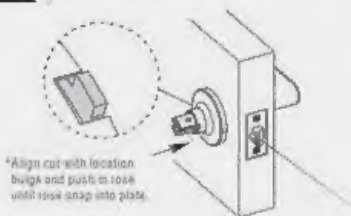

## 5 INSTALL INSIDE LEVER

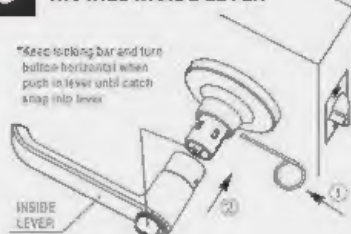

## 6 INSTALL STRIKE

